

Shutter Key Reference List

Raw Key No.	Numbers on key tag				
A01	A~01	A~21	A~41	A~61	A~81
A02	A~02	A~22	A~42	A~62	A~82
A03	A~03	A~23	A~43	A~63	A~83
A04	A~04	A~24	A~44	A~64	A~84
A05	A~05	A~25	A~45	A~65	A~85
A06	A~06	A~26	A~46	A~66	A~86
A07	A~07	A~27	A~47	A~67	A~87
A08	A~08	A~28	A~48	A~68	A~88
A09	A~09	A~29	A~49	A~69	A~89
A10	A~10	A~30	A~50	A~70	A~90
A11	A~11	A~31	A~51	A~71	A~91
A12	A~12	A~32	A~52	A~72	A~92
A13	A~13	A~33	A~53	A~73	A~93
A14	A~14	A~34	A~54	A~74	A~94
A15	A~15	A~35	A~55	A~75	A~95
A16	A~16	A~36	A~56	A~76	A~96
A17	A~17	A~37	A~57	A~77	A~97
A18	A~18	A~38	A~58	A~78	A~98
A19	A~19	A~39	A~59	A~79	A~99
A20	A~20	A~40	A~60	A~80	A~00

Raw Key No.	Numbers on key tag				
B01	B~01	B~21	B~41	B~61	B~81
B02	B~02	B~22	B~42	B~62	B~82
B03	B~03	B~23	B~43	B~63	B~83
B04	B~04	B~24	B~44	B~64	B~84
B05	B~05	B~25	B~45	B~65	B~85
B06	B~06	B~26	B~46	B~66	B~86
B07	B~07	B~27	B~47	B~67	B~87
B08	B~08	B~28	B~48	B~68	B~88
B09	B~09	B~29	B~49	B~69	B~89
B10	B~10	B~30	B~50	B~70	B~90
B11	B~11	B~31	B~51	B~71	B~91
B12	B~12	B~32	B~52	B~72	B~92
B13	B~13	B~33	B~53	B~73	B~93
B14	B~14	B~34	B~54	B~74	B~94
B15	B~15	B~35	B~55	B~75	B~95
B16	B~16	B~36	B~56	B~76	B~96
B17	B~17	B~37	B~57	B~77	B~97
B18	B~18	B~38	B~58	B~78	B~98
B19	B~19	B~39	B~59	B~79	B~99
B20	B~20	B~40	B~60	B~80	B~00

Example:

The number on key tag for example : A137 or on MAXSYM : A2237

Becomes A~37 in the table or on MAXSYM A~~37 ("~" means first number.)

And "A~37" refers to key "A17" (showed in red)

So the part number for a key (Firenze250) would be for example : 35111-HMA-000-A17